


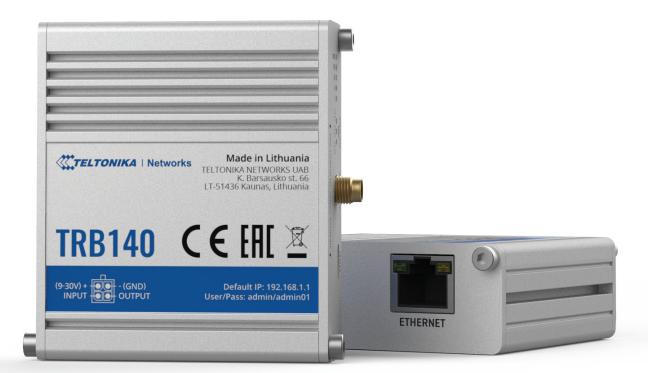


# **TRB140**






# HARDWARE


# **FRONT VIEW**

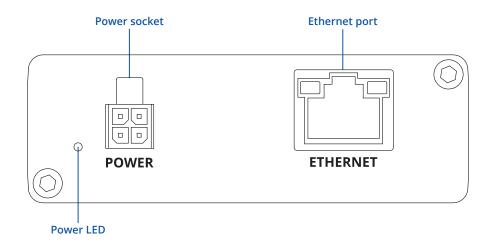

**BACK VIEW** 

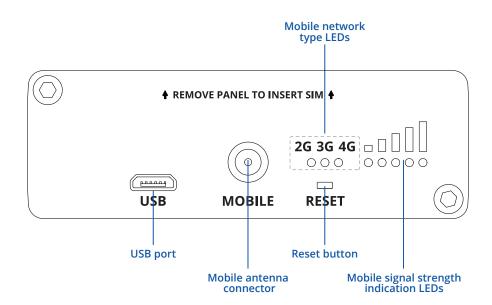

# **POWER SOCKET PINOUT**





# **FEATURES**

# MOBILE

Mobile module	4G (LTE) – Cat 4 up to 150 Mbps, 3G – Up to 42 Mbps, 2G – Up to 236.8 kbps
Status	Signal strength (RSSI), SINR, RSRP, RSRQ, EC/IO, RSCP Bytes sent/received, connected band, IMSI, ICCID.
SMS/Call	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, EMAIL to SMS, SMS to EMAIL, SMS to HTTP, SMS to SMS, scheduled SMS, SMS autoreply, Call utilities
USSD	Supports sending and reading Unstructured Supplementary Service Data messages
Black/White list	Operator black/white list
Band management	Band lock, Used band status display
APN	Auto APN
Bridge	Direct connection (bridge) between mobile ISP and device on LAN
Passthrough	Gateway assigns its mobile WAN IP address to another device on LAN
Multiple PDN	Possibility to use different PDNs for multiple network access and services

# ETHERNET

LAN

1 x RJ45 port, 10/100/1000 Mbps, supports auto MDI/MDIX crossover

# NETWORK

TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, SMTP, SSL v3, TLS, PPP, PPPoE, SSH, DHCP, SNMP, MQTT, Wake on LAN (WOL)
Static routing
Ping Reboot, Wget Reboot, Periodic Reboot, LCP and ICMP for link inspection
Port forwards, traffic rules, custom rules
Static and dynamic IP allocation
Traffic priority queuing by source/destination, service, protocol or port
Supported >25 service providers, others can be configured manually
Possibility to mount remote file system via SSH protocol

# SECURITY

Authentication	Pre-shared key, digital certificates, X.509 certificates
Firewall	Pre-configured firewall rules can be enabled via the WebUI, unlimited firewall configuration via CLI; NAT; NAT-T
Attack prevention	DDOS prevention (SYN flood protection, SSH attack prevention, HTTP/HTTPS attack prevention), port scan prevention ( SYN-FIN, SYN-RST, X-mas, NULL flags, FIN scan attacks)
Mobile quota control	Set up custom data limits for SIM card
WEB filter	Blacklist for blocking out unwanted websites, Whitelist for specifying allowed sites only
Access control	Flexible access control of TCP, UDP, ICMP packets, MAC address filter

#### VPN

VIIN	
OpenVPN	Multiple clients and a server can run simultaneously, 12 encryption methods
OpenVPN Encryption	DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC, CAST5-CBC, RC2-64-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC
IPsec	IKEv1, IKEv2, supports up to 5 x VPN IPsec tunnels (instances), with 5 encryption methods (DES, 3DES, AES128, AES192, AES256)
GRE	GRE tunnel
PPTP, L2TP	Client/Server services can run simultaneously, L2TPv3 support
ZeroTier	ZeroTier VPN
WireGuard	WireGuard VPN client and server support



# MODBUS TCP SLAVE

ID filtering	Respond to one ID in range [1;255] or any
Allow remote access	Allow access through WAN
Custom registers	MODBUS TCP custom register block, which allows to read/write to a file inside the router, and can be used to extend MODBUS TCP slave functionality
MODBUS TCP MASTER	

# MODBUS TCP MASTER

Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC), HEX, ASCII

# **MQTT GATEWAY**

Gateway

Allows sending commands and receiving data from MODBUS Master trough MQTT broker

# DATA TO SERVER

Protocol HTTP(S), MQTT, Azure MQTT, Kinesis

# **MONITORING & MANAGEMENT**

WEB UI	HTTP/HTTPS, status, configuration, FW update, CLI, troubleshoot, system log, kernel log
FOTA	Firmware update from sever, automatic notification
SSH	SSH (v1, v2)
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET
Call	Reboot, Status, Mobile data on/off, Output on/off, answer/hang-up with a timer
TR-069	OpenACS, EasyCwmp, ACSLite, tGem, LibreACS, GenieACS, FreeACS, LibCWMP, Friendly tech, AVSystem
MQTT	MQTT Broker, MQTT publisher
SNMP	SNMP (v1, v2, v3), SNMP trap
JSON-RPC	Management API over HTTP/HTTPS
MODBUS	MODBUS TCP status/control
RMS	Teltonika Remote Management System (RMS)

### **IOT PLATFORMS**

Cloud of Things	Allows monitoring of: Device data, Mobile data, Network info, Availability
ThingWorx	Allows monitoring of: WAN Type, WAN IP Mobile Operator Name, Mobile Signal Strength, Mobile Network Type
Cumulocity	Allows monitoring of: Device Model, Revision and Serial Number, Mobile Cell ID, ICCID, IMEI, Connection Type, Operator, Signal Strength, WAN Type and IP
Azure loT Hub	Can send device IP, Number of bytes send/received/ 3G connection state, Network link state, IMEI, ICCID, Model, Manufacturer, Serial, Revision, IMSI, Sim State, PIN state, GSM signal, WCDMA RSCP WCDMA EC/IO, LTE RSRP, LTE SINR, LTE RSRQ, CELL ID, Operator, Operator number, Connection type, Temperature, PIN count to Azure IoT Hub server

# SYSTEM CHARACTERISTICS

CPU	ARM Cortex-A7 1.2 GHz CPU
RAM	128 MB (50 MB available for userspace)
FLASH storage	512 MB (200 MB available for userspace)

# **FIRMWARE / CONFIGURATION**

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup
FOTA	Update FW/configuration from server
RMS	Update FW/configuration for multiple devices
Keep settings	Update FW without losing current configuration

# FIRMWARE CUSTOMIZATION

Operating system	RutOS (OpenWrt based Linux OS)
Supported languages	Busybox shell, Lua, C, C++
Development tools	SDK package with build environment provided



#### **INPUT/OUTPUT**

Power consumption

Configurable I/O	2 x Configurable Inputs/Outputs. Digital input 0 - 5 V detected as logic low, 8 - 30 V detected as logic high. Open collector output, max output 30 V, 300 mA (not available in TRB140*2****)
Output control	HTTP POST/GET, Schedule
Events	SMS, EMAIL
I/O juggler	Allows to set certain I/O conditions to initiate event
POWER	
Connector	4 pin industrial DC power socket
Input voltage range	9 – 30 VDC (4 pin industrial socket), reverse polarity protection, surge protection >33 VDC 10us max
PoE (passive)	Passive PoE over spare pairs. Possibility to power up through LAN port, not compatible with IEEE802.3af, 802.3at and 802.3 standards

# PHYSICAL INTERFACES (PORTS, LEDS, ANNTENAS, BUTTONS, SIM)

< 5 W

Ethernet	1 x RJ45 port, 10/100/1000 Mbps	
I/Os	2 x Configurable I/O pins on 4 pin power connector (I/O not available in TRB140*2****)	
USB	1 x Virtual network interface via micro USB	
Status LEDs	3 x connection type status LEDs, 5 x connection strength LEDs, 2 x LAN status LEDs, 1x Power LED	
SIM	1 x SIM slot (Mini SIM – 2FF), 1.8 V/3 V	
Power	1 x 4 pin DC connector	
Anntena	1 x SMA for LTE	
Reset	Reboot/User default reset/Factory reset button	

## PHYSICAL SPECIFICATION

Casing material	Aluminum housing
Dimensions (W x H x D)	74.5 x 25 x 64.4 mm
Weight	134 g
Mounting options	Bottom and sideways DIN rail, Flat surface

# **OPERATING ENVIRONMENT**

Operating temperature	-40 °C to 75 °C
Operating humidity	10 % to 90 % non-condensing
Ingress Protection Rating	IP30

#### **REGULATORY & TYPE APPROVALS**

Regu	latory

CE/RED, EAC, RoHS, WEEE

## EMI Standards Draft ETSI EN 301 489-1 V2.2.0, Draft ETSI EN 301 489-19 V2.1.0, Draft ETSI EN 301 489-52 V1.1.0 ESD EN 61000-4-2:2009 RS EN 61000-4-3:2006 + A1:2008 + A2:2010 EFT EN 61000-4-4:2012 Surge protection EN 61000-4-5:2014 CS EN 61000-4-6:2014 DIP EN 61000-4-11:2004 RF Standards EN 300 511 V12.5.1, ETSI EN 301 908-1 V11.1.1, ETSI EN 301 908-1 V11.1.2, EN 301 908-2 V11.1.2, ETSI EN 301 908-1 V11.1.2 SAFETY IEC 62368-1:2014(Second Edition), EN 62368-1:2014+A11:2017 Standards


EN 50385:2017

EN 62232:2017



# **HARDWARE INSTALLATION**

- 1. Unscrew two back panel hex bolts and remove the back panel.
- 2. Insert your SIM card into the SIM socket.
- 3. Attach the panel and tighten the hex bolts.
- 4. Attach the mobile antenna (max torque 0.4 N·m / 3.5 lbf·in) and connect the USB cable.

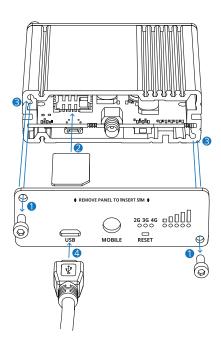

# LOGIN TO DEVICE

- 1. Power on the device and connect the USB cable to your computer.
- 2. Allow the gateway to boot up. This might take up to 30 seconds.
- 3. Your computer's OS should detect the USB device and install the driver.
- 4. To enter the gateway's Web interface (WebUI), type http://192.168.2.1 into the URL field of your Internet browser.
- 5. Use login information shown in image A when prompted for authentication.
- 6. After logging in pay attention to the Signal Strength indication displayed in the Mobile widget (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.

Α.	<b><i>TELTONIKA</i></b>		<b>B.</b>	MOBILE	-65 dBm .1
	AUTHORIZATION REQUIRED	admin		Data connection state	Connected
	Please anter your username and password	admin01		State	Registered (home); OPERATOR; 4G (LTE)
				SIM card slot in use	Ready
				Bytes received/sent*	348.7 KB / 223.5 KB
			J		

#### **TECHNICAL INFORMATION**

Radio specifications			
RF technologies	2G, 3G, 4G		
Max RF power 33 dBm@GSM, 24 dBm@WCDMA, 23 dBm@LTE			
Bundled accessories specifications*			
Power adapter	Input: 0.4A@100-240VAC, Output: 9VDC, 0.5A, 4-pin plug		
Mobile antenna 698~960/1710~2690 MHz, 50 Ω, VSWR<2, gain** 2 dBi, omnidirectional, SMA male connector			

\*Order code dependent.
\*\*Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.



# WHAT'S IN THE BOX?

# **STANDARD PACKAGE CONTAINS\***

- TRB140
- 4.5 W PSU
- 1 x LTE antenna (magnetic mount, SMA male, 3 m cable)
- Micro-USB cable (0.8 m)
- 1 x hex key
- LAN cable
- QSG (Quick Start Guide)
- RMS Flyer
- Packaging box





\* For all standard order codes standard package contents are the same, execpt for PSU.



# **STANDARD ORDER CODES**

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS
TRB140 003000	851762	8517.62.00	Standard Package

For more information on all available packaging options - please contact us directly.

# **AVAILABLE VERSIONS**

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
TRB140 0****	Europe, the Middle East, Africa, Korea, Thailand, India, Malaysia	<ul> <li>4G (LTE-FDD): B1, B3, B7, B8, B20, B28A</li> <li>4G (LTE-TDD): B38, B40, B41</li> <li>3G: B1, B8</li> <li>2G: B3, B8</li> </ul>
TRB140 1****	South America, Australia, New Zealand, Taiwan, Malaysia	<ul> <li>4G (LTE-FDD): B1, B2, B3, B4, B5, B7, B8, B28</li> <li>4G (LTE-TDD): B40</li> <li>3G: B1, B2, B5, B8</li> <li>2G: B2, B3, B5, B8</li> </ul>

The price and lead-times for region (operator) specific versions may vary. For more information please contact us. \* - Versions for other regions are under development.



# **MOUNTING OPTIONS**

# **DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

# **DIN RAIL KIT**

- DIN Rail adapter
- Philips Pan Head screw #6-32×3/16, 2pcs for RUT2xx/RUT9xx




ORDER CODE	HS CODE	HTS CODE
PR5MEC00	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

# **COMPACT DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	ABS + PC plastic
Weight	6.5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	70 mm x 25 mm x 14,5 mm
RoHS Compliant	V



# DIN RAIL KIT

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs



For more information on all available packaging options - please contact us directly.

# **SURFACE MOUNTING KIT**

Parameter	Value
Mounting standard	Flat surface mount
Material	ABS + PC plastic
Weight	2x5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	25 mm x 48 mm x 7.5 mm
RoHS Compliant	V



# DIN RAIL KIT

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC12	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.



# **TRB140 SPATIAL MEASUREMENTS & WEIGHT**


## MAIN MEASUREMENTS

W x H x D dimensions for TRB140	
Device housing*:	74.5 x 25 x 64.4
Box:	173 x 71 x 148

\*Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.


### **TOP VIEW**

The figure below depicts the measurements of TRB140 and its components as seen from the top:

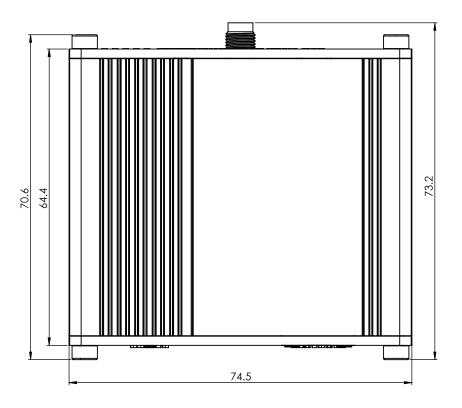

# **RIGHT VIEW**


The figure below depicts the measurements of TRB140 and its components as seen from the right side:

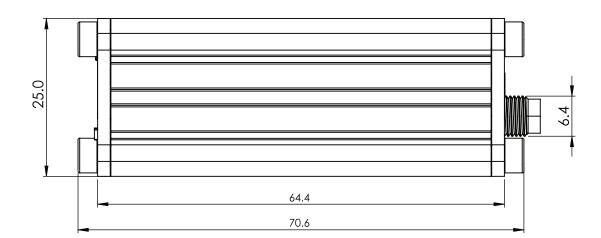




## **FRONT VIEW**

The figure below depicts the measurements of TRB140 and its components as seen from the front:

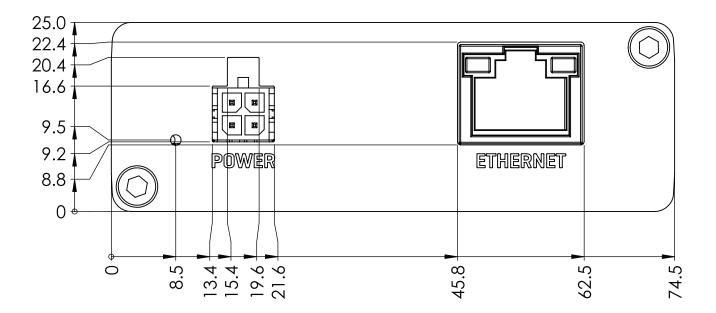

# **REAR VIEW**


The figure below depicts the measurements of TRB140 and its components as seen from the back:

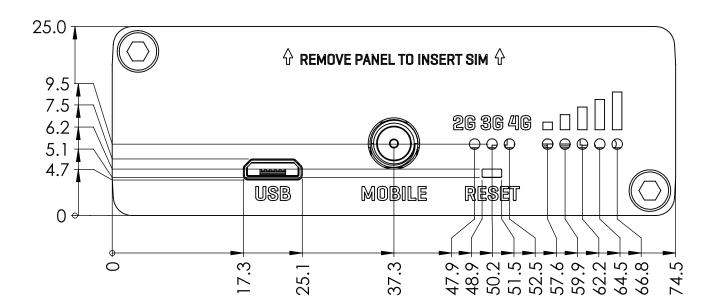



# MOUNTING SPACE REQUIREMENTS

The figure below depicts an approximation of the device's dimensions when cables and antennas are attached:

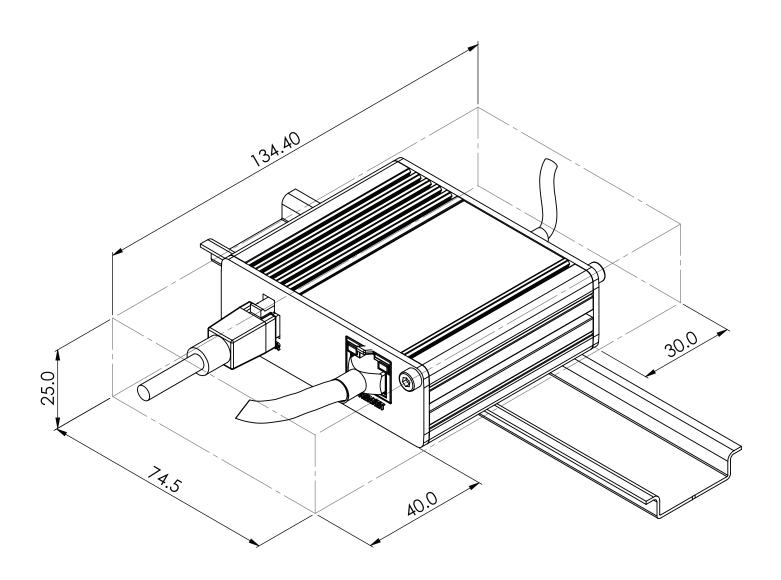



# **DIN RAIL**

The scheme below depicts protrusion measurements of an attached DIN Rail:

